

# Brown 218

*(TEC classroom – level B)*

# No Access Codes Needed.

*This room utilizes a ceiling-mounted projector, focused on a wall-mounted pull down screen.*

## Displaying Video or Computer Sources

- At the Instructor Station. Push **DOWN** on the black system controller to access controls. Touch the screen to begin.
- Press the **PC (or any source)** button to turn on the display system. The projector will take over a minute to warm up. *No controls will function during warm up.*
- After the warm up, you can select any source using the appropriate buttons. *(Buttons illuminate when active.) It's recommended to wait a few seconds between input selections.*
  - Press the **PC** button to display the installed Instructor PC. *There are courtesy USB ports on the front of the Instructor PC or on a USB extender near the monitor.*
  - Press the **LAPTOP HDMI/VGA** button to activate laptop connectivity. Depending upon the room, a secondary press may be needed from a pop-up page, selecting either HDMI or VGA. Both cables are provided at the instructor station. *Users must provide their MAC & DisplayPort adapters.*
  - Press the **DVD** button to select the DVD player. A disc control page will appear on the touch panel allowing you to control the player.
  - The **AUX AV** button activates front rack-panel inputs, allowing you to connect external video devices, such as a VHS player or camcorder. If in need of a VHS player, contact Media Technology Services (MTS: 781- 736-4635) to request a temporary unit. *Legacy VHS stock is declining, and this is based on inventory availability.*
- INSTRUCTOR PC LOGON:** \*\*\*Use your UNET name and password, in the USERS domain. \*\*\*
- Laptops going wireless may be logged securely to Eduroam using your UNET address and password, or to the unsecure guest network, using a personal email address. Open a browser to access the log on process.*
- The **IMAGE MUTE**, **AUTO-IMAGE** and **ASPECT RATIO** buttons allow further adjustment of images on the screen



## Audio Controls

- Press the **SOURCE VOLUME ^**, **VOLUME v** and **MUTE** buttons to control levels.
- If microphones are connected, press **MIC VOLUME** and these same buttons become microphone level controls, for those recording or sending to an Assisted Listening Device. Revert back to **SOURCE VOLUME** for device level control.



## Playing Audio through the system

- Audio discs and files will play through the PC, your laptop / tablet, or the DVD player. Press the source button for your chosen device.
- You can also play audio by connecting your portable player to the stereo (3.5mm) connector on the rack panel, and pressing AUX AV, followed by pressing the AUX AUDIO/iPOD button.

## When Finished

Press **SYSTEM OFF**, and confirm by pressing **POWER DOWN**. **Be sure the projector begins to power off with its 90 second cool down process to save lamp life!**