

Rosenstiel 118

TEC classroom, level B

This room utilizes a ceiling-mounted projector, focused on ceiling-mounted electric screen. A lecture capture pilot program is available in this room.

TEMPORARY INSTRUCTIONS

Activating the System

1. At the Instructor Station, push **DOWN** on the black system controller to access controls. Touch the control screen to begin.
2. Press the **PC (or any source)** button to turn on the display system. The projector will take over a minute to warm up. **No controls will function during warm up.**
3. After the warm up, you can select another source using the appropriate buttons. (*Buttons illuminate when active.*) **It's recommended to wait a few seconds between input selections.**

Displaying Video or Computer Sources

1. Press the **PC** button to display the installed Instructor PC. **This PC is meant to be 3D capable. Details will follow after further testing.** Instructors can logon using a UNET name and password.
2. Press the **LAPTOP/HDMI** button to activate both **VGA** and the **Digital HDMI** cables for your laptop source. These cables are provided at the instructor station. Beyond the buttons, **the system will auto-detect, and switch to a laptop when properly connected.** **Users must provide their MAC & DisplayPort adapters.** Laptops going wireless may be logged on using your UNET name and password, or as a guest account using a personal email address. Open a browser to access the log on process.
3. Press the **DOC CAM** button to display the Document Camera, located on the Instructor Lectern. The camera arm can be raised or lowered with one finger, pulling up at the half-way junction of the arm. Document Camera controls will be found on the device itself.
 - a. **Power & Lamp controls:** located on the side of the unit.
 - b. **Light, Zoom, Focus, Rotate controls:** on the camera head
4. Press the **DVD/BluRay** button to select that player. A disc control page will appear on the touch panel to control the player.
5. Press the **AUX AV** button to activate front rack-panel inputs, allowing you to connect external video devices, such as a VHS player or camcorder. If in need of a VHS player, contact Media Technology Services (MTS: 781- 736-4635) to request a temporary unit. Legacy VHS stock is declining, and loans are based on inventory availability.
6. The **IMAGE MUTE** and **AUTO-IMAGE** buttons allow further adjustment of images on the screen

Audio Controls

1. Press the **SOURCE VOLUME up & down arrows**, and the **MUTE** button to control levels.
2. *Play audio discs and files through the PC, your laptop or tablet, or the DVD player, by pressing the source button for your chosen device.*
3. Play audio by connecting your portable player to the stereo (3.5mm) connector on the rack panel and selecting the **AUX** input.
4. Microphones: You can use the lectern mic, or the wireless lav (clip-on) mic at the Instructor lectern. Speech volume can be controlled on the touch panel.



When Finished

To finish and shut down, press **SYSTEM OFF**, and confirm by pressing **POWER DOWN**. **Be sure the projector begins to power off with its 90 second cool down process to save lamp life!**