

Golding 103 & 107

(TEC classroom – level B)

This room utilizes a ceiling-mounted projector, focused on a wall-mounted pull down screen.

No Access Codes Needed.

Displaying Video or Computer Sources

1. At the Instructor Station: Press a finger to the control touch panel to awaken the system and access controls.
2. Press the **PC/Laptop (or any source)** button to turn on the display system. The projector will take over a minute to warm up. *No controls will function during warm up.*
3. After the warm up, you can select any source using the appropriate buttons. *(Buttons illuminate when active.) It's recommended to wait a few seconds between input selections.*
 - Press the **PC/Laptop** button to display the installed Instructor PC. *There are courtesy USB ports on the front of the PC or on adjacent USB extender.*
 - INSTRUCTOR PC LOGON: ****Use your UNET name and password, in the USERS domain. ****
 - Laptops connected via the VGA cable will auto-detect and display on the screen.
4. Press the **HDMI** button to activate laptop connectivity via the HDMI cable. Both VGA and HDMI cables are provided at the instructor station. *** Users must provide their MAC, DisplayPort or usb-C adapters.***
 - Laptops looking for wireless internet may be logged securely to the Eduroam network using your full UNET address and password, or to the unsecure guest network, using a personal email address. Open a browser to access the log on process.
5. Press the **DVD** button to select the player. A disc control page will appear on the touch panel allowing you to control the player.
6. Press the **AUX AV** button to activate front rack-panel inputs, allowing you to connect external video devices, such as a VHS player. If in need of a VHS player, contact Media Technology Services (MTS: 781-736-4635) in advance to request a temporary unit. *Legacy VHS stock is diminishing, and requests are met based on inventory availability.*
7. The **IMAGE MUTE**, **AUTO-IMAGE** and **ASPECT RATIO** buttons allow further adjustment of images on the screen



Audio Controls

1. Press the **SOURCE VOLUME ^**, **VOLUME v** and **MUTE** buttons to control levels.
2. If microphones are connected, press **MIC VOLUME** and these same buttons become microphone level controls, for recording or sending to an Assisted Listening Device. Revert back to **SOURCE VOLUME** for device level control.

Playing Audio through the system

*Audio discs and files will play through the PC, your laptop / tablet, or the DVD player. Press the source button for your chosen device. You can also play audio by connecting a media player to the stereo (3.5mm) connector on the rack panel, and pressing **AUX AUDIO** on the touch panel.*

When Finished

Press **SYSTEM OFF**, and confirm by pressing **POWER DOWN**. **Be sure the projector begins to power off with its 90 second cool down process! Help conserve display life!**