











Walk And Talk Interactive Quick Start Guide


After the A/V system and computer have been turned on you will see a projected image on the board. Because the interactive white board slides from side to side, you will need to align the image to a point of origin. This point of origin will be your finger.

Step 1: From the Walk and Talk remote control, press the "Projection" button  to activate the white board. You will hear a chime.

Step 2: Press your finger anywhere onto the surface of the white board. You will notice that the mouse pointer on the screen is now somewhat close to your finger horizontally. While still holding your finger in that same spot, slide the white board over so that your finger and mouse pointer meet each other. Alignment complete.

The white board is designed so that the user can use either finger or the silver writing tool as the mouse. Just like a regular mouse you can double click icons to open documents and programs. To perform a right click for more options, press the "R" button.  on the remote control. To return to left click operation, press the "L" button. 


The white board also allows the user to make hand written notes on top of any document or website or just on the desktop. To do this, press the "Cursor/Pen" button.  This will turn the mouse pointer into a colored pen. Choose any of the four colors on the remote to draw with.  For more choices, press the "Pen Styles" button.  to return to the pointer, press the "Cursor/Pen" button again.  Use the Digital Eraser to erase any digital lines made by the Digital Pen or your finger, or simply press the "Erase All"  button on the remote.

If you wish to save the current desktop image to a .pdf file, press the "Save" button.  NOTE: All saved images will be saved to the desktop. These saved documents can be emailed or saved to a USB flash stick at any time.

We recommend not writing on the white board with the regular, erasable markers. Simply slide the white board out of your way and use the back mounted, traditional white board.

Please remember to turn off the projector when finished with your class or event.


Contact Media Technology Services for further assistance at 64632 or 64429.

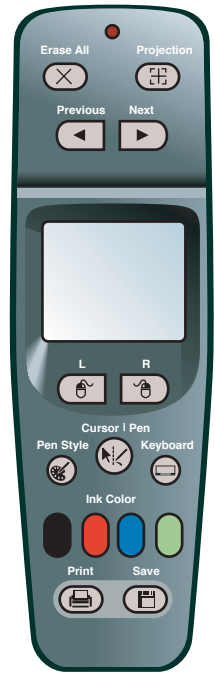

Remote Control



Digital Pen

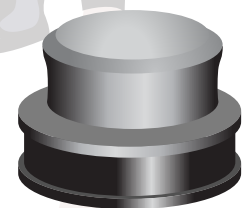

Digital Eraser

